

# RAYMOND WEIL

GENEVE

**RAYMOND WEIL S.A.**  
Avenue Eugène-Lance 36-38  
P.O. Box 1569  
1211 Geneva 26  
Switzerland  
Tel: +41 (0) 22 884 00 55  
Fax: +41 (0) 22 884 00 50



**GENERAL INFORMATION**  
info@raymond-weil.ch

**AFTER SALES SERVICE**  
customer-service@raymond-weil.ch

**WEBSITE**  
www.raymondweil.com

INSTRUCTIONS FOR USE

## QUARTZ WATCHES SHINE



### INTRODUCTION

We congratulate you on having chosen a watch from the prestigious RAYMOND WEIL collection, the living expression of masterful design and of the continuous quest for top quality, which have been the hallmarks of the Brand since its creation.

Your RAYMOND WEIL watch is fitted with a high-quality quartz movement. A quartz watch enjoys the advantage of being extremely precise.

In order to guarantee the perfect functioning of your RAYMOND WEIL watch for many long years, we thank you to pay close attention to the advice contained in these Instructions for Use as well as in the International Guarantee booklet.

### CHANGING THE DATE AND SETTING THE TIME



- 1 Normal position
- 2 Rapid date change
- 3 Time-setting

Your RAYMOND WEIL watch may be fitted with a screw-down crown. Before setting the time or changing the date, it is therefore necessary to unscrew the crown by pulling it straight out and turning it anti-clockwise. The crown will then be released by a spring. After completing all settings, press lightly on the crown, while turning it clockwise, and screw it back in gently in order to preserve your watch's water-resistance.

### CHANGING THE DATE (applicable only for watches with date indication)

In order to adjust the date rapidly, pull the crown out to position 2. Then, depending on the model of your watch, turn the crown forwards or backwards until the desired date appears in the window. The date changes as the hour hand passes midnight. During this operation, your watch will continue to function and so will not need to be reset.

Do not change the date when the watch is showing a time between 10 pm and 2 am. The watch's automatic date change mechanism engages during this time period and the movement could be damaged.

After finishing your changes, always push the crown back in to position 1, in order to preserve your watch's water-resistance.

### SETTING THE TIME

In order to adjust the time, pull the crown out to position 3 and turn it forwards or backwards until the hands indicate the desired time.

 
After setting the time, always push the crown back in to position 1, in order to restart the hands and to preserve your watch's water-resistance.

### RECOMMENDATIONS


Your RAYMOND WEIL watch is powered by a battery with an average life of approximately 3 years. In order to make the battery last longer, pull the crown out to position 3 whenever you do not intend to wear your watch for a while.

Certain RAYMOND WEIL models are equipped with a battery end-of-life (E.O.L.) indicator. With these models, the second hand jumps every 4 seconds, indicating that the battery is near exhaustion and should be replaced without delay, in order to avoid any risk of damage to the movement.


Please have your watch battery changed only by an approved RAYMOND WEIL dealer.

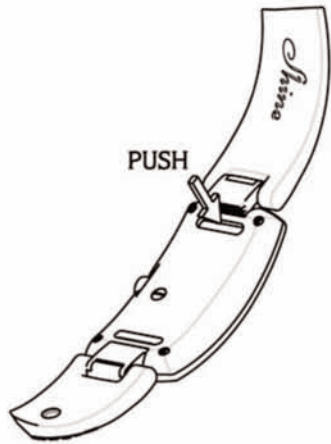

 
1.

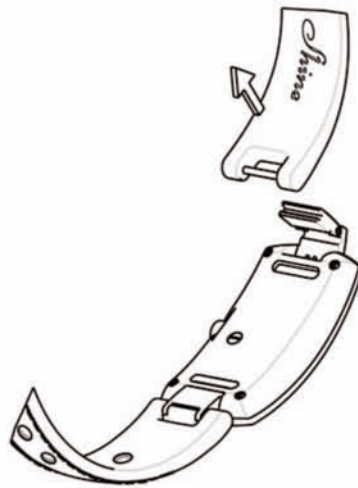

 2.

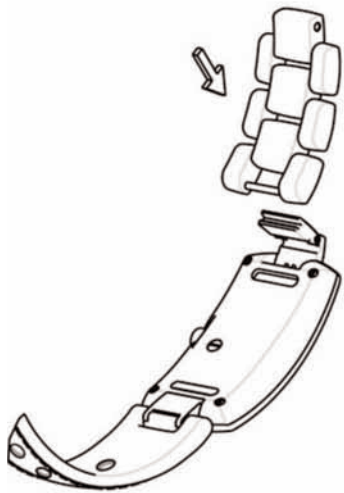

 3.

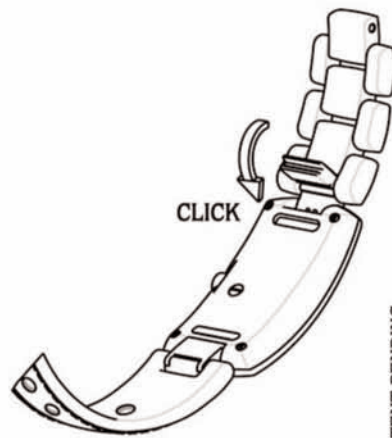

4.

© PATENT PENDING



#### NOTICE

Disposal of a watch by non-compliant methods may cause harm to the environment and is heavily fined according to the regulations established by each one of the EU member countries in application of the Directive on Waste Electrical and Electronic Equipment (Directive 2002/96/EC WEEE). Should you need to dispose of an old watch, please set it aside for separate waste collection or give it to a retailer when purchasing a new watch. RAYMOND WEIL and its approved dealers are at your disposal to provide you with additional information on the subject.

